


ENCLO

HIDE IT WITH STYLE

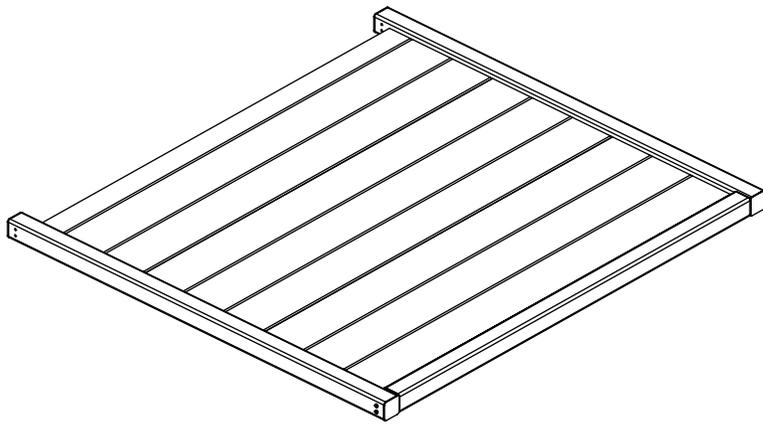

Liberty Lattice

Optional Winter
Cover Kit
36" W x 36" H

15 min

Approximate assembly time



Scan the QR code

for an assembly video



ASSEMBLY INSTRUCTIONS

ZP19054

www.encloscreens.com

VER. 062421

GENERAL INFORMATION



IMPORTANT

- Check the inside of the larger pieces in your box for other materials packed inside.
- When assembling components, place on a non-abrasive surface (i.e. shipping box) to avoid scratching.
- We recommend an area approximately 5'x 8' for unobstructed assembling.
- You should not need to use excessive force when assembling components.

MISSING OR DAMAGED PARTS?

VISIT OUR WEBSITE FIRST, SO WE CAN HELP YOU RIGHT AWAY!

Although great care has been taken to ensure proper packaging and handling of this product, occasionally problems occur. If you discover any missing, damaged or defective parts, please visit our website to order replacement parts. If you experience any further trouble with your product, please contact our customer service department.

 parts.nychbrands.com

 support@encloscreens.com

 **704-892-5222 / 877-234-6196**

Customer service agents are available to take calls weekdays from 9am-5pm EST. If you call outside of business hours, please leave a voicemail.

To help you quickly and accurately, please have reference item number **ZP19054** and the specific part name which can be found on page 4. It is helpful if you can provide the batch lot which is a stamped number on the end of the box.


NEED ASSEMBLY HELP?

If you are having problems with the assembly or installation of this product, we are happy to assist you with the process, **so please give us a call at 704-892-5222 / 877-234-6196**




NEED TO RETURN?

If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

Detailed Product Dimensions & Specifications

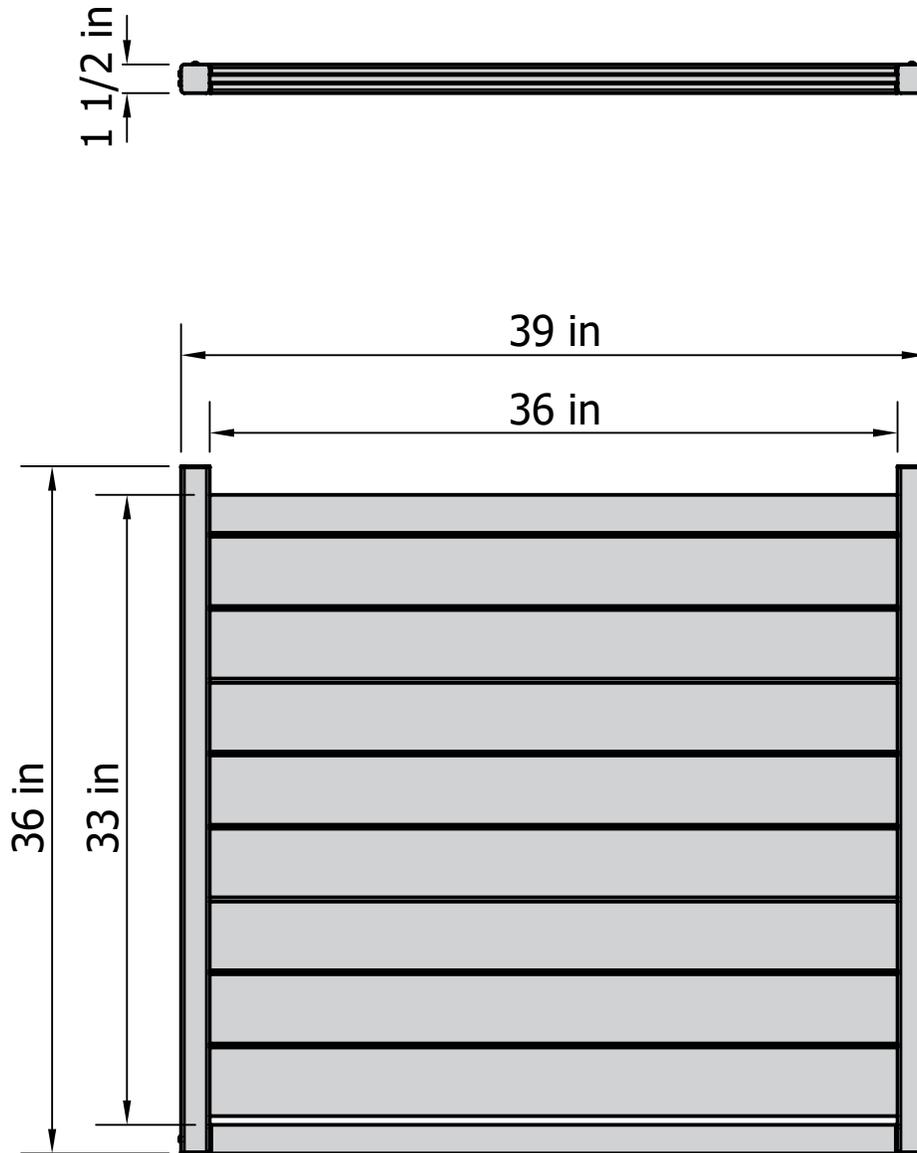


STEP 1: LAY OUT MATERIALS
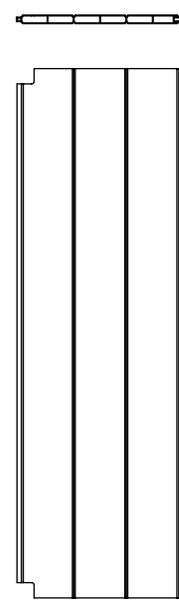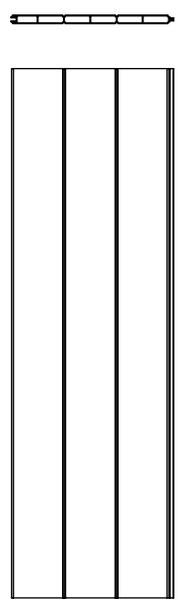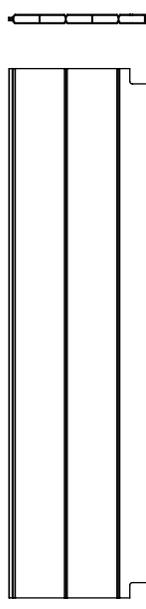
<p>A</p>  <p>Front Frame (1) 1½" x 1½" x 36"</p>	<p>B</p>  <p>Side Frame (2) 1½" x 1½" x 36"</p>	<p>F</p>  <p>1" Self-Drilling Stainless Steel Screw (2)</p>	
<p>C</p>  <p>Front Board (1) ½" x 12" x 38¾"</p>	<p>D</p>  <p>Middle Board (1) ½" x 12" x 38¾"</p>	<p>E</p>  <p>Back Board (1) ½" x 12" x 38¾"</p>	<p>G</p>  <p>2½" Self-Drilling Stainless Steel Screw (4)</p>

STEP 2: ASSEMBLE THE BOARDS


STEP 2.1

- Identify the Side Frames (**B**) and position (1) side frame as shown below.

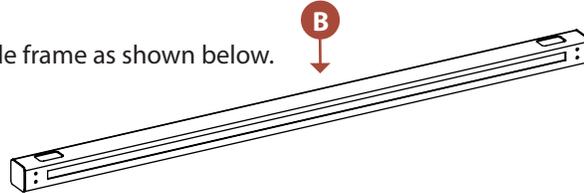


STEP 2.2

- Slide the Front Boards (**C**) into the long slot in the side frame as shown below until it hits the back wall.

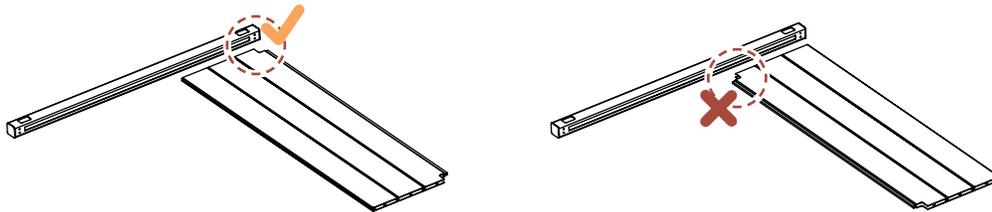


STEP 2.3

- Slide the tongue of the Middle Board (**D**) into the groove of the front board. Continue sliding the middle board into the slot of the side frame until it hits the back wall.

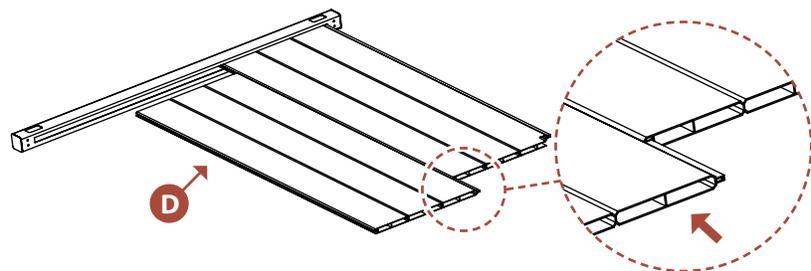

STEP 2.4


- Slide the tongue of the Back Board (**E**) into the groove of the middle board. Continue sliding the back board into the slot of the side frame until it hits the back wall.

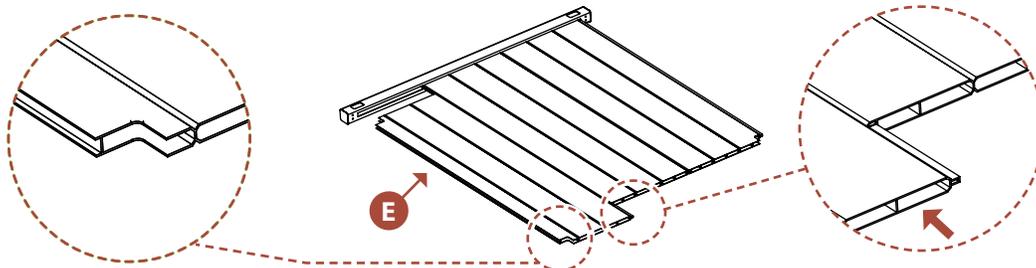

STEP 3: ASSEMBLE THE FRONT FRAME


STEP 3.1

Drive a 1" Self-Drilling Stainless Steel Screw (F) into the side frame near the back board, roughly one inch from the large hole in the side frame.

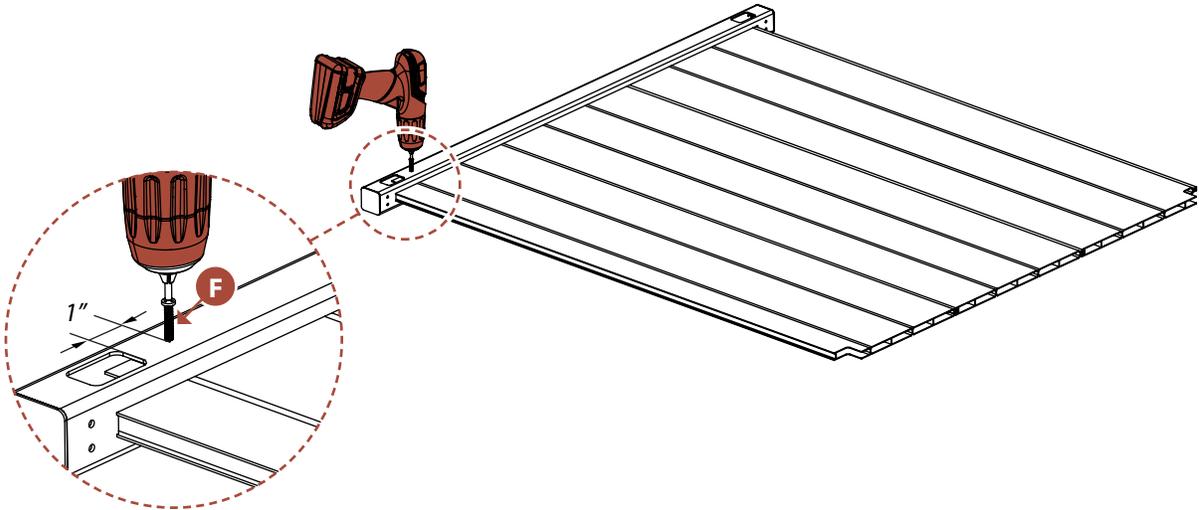

STEP 3.2


1. Position the Front Frame (A) so that it is at a right angle to the side frame as shown below.
2. Drive (2) 2½" Self-Drilling Stainless Steel Screws (G) into the pre-drilled holes in the side frame.

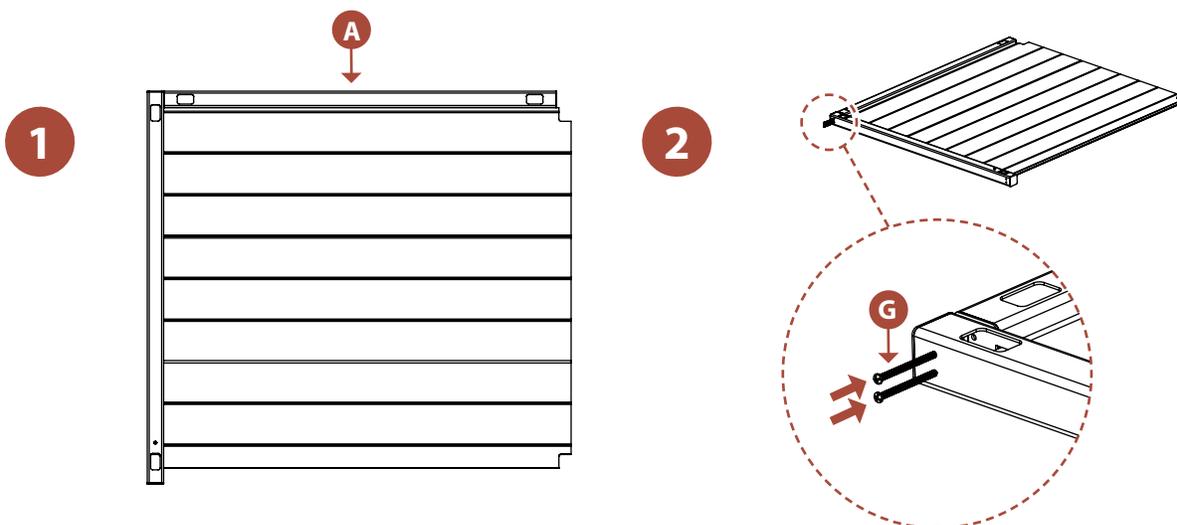

STEP 4: ASSEMBLE THE COVER


STEP 4.1

1. Slide the boards into the slot in the second side frame, starting from the back of the boards. Continue sliding the boards into the side frame until the side frame is touching the front frame.
2. Drive (2) 2½" self-drilling stainless steel screws into the pre-drilled holes in the second side frame.

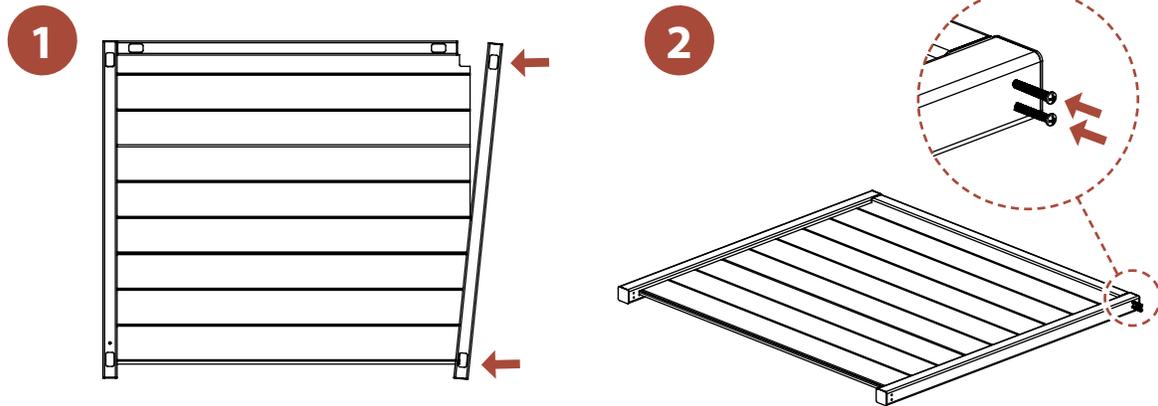

STEP 4.2


1. Drive a 1" self-drilling stainless steel screw into the side frame near the back board, roughly one inch from the large hole in the side frame.

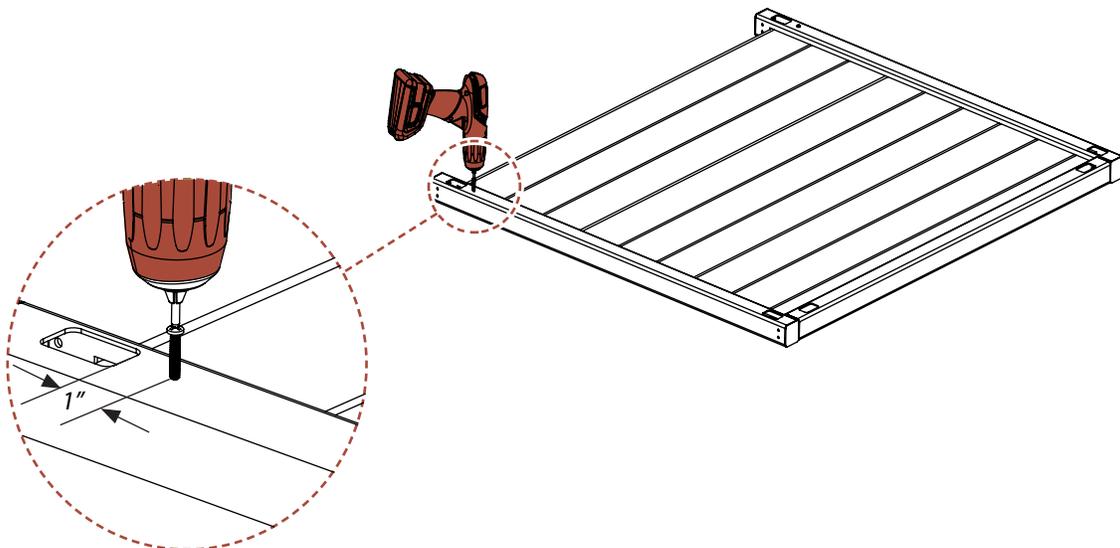

STEP 5: INSTALL THE COVER

STEP 5.1

Remove all of the post caps from your Liberty Lattice AC Screen Kit (ZP19052). Turn your assembled cover over and insert the posts of the screen into the holes on the bottom of the roof.

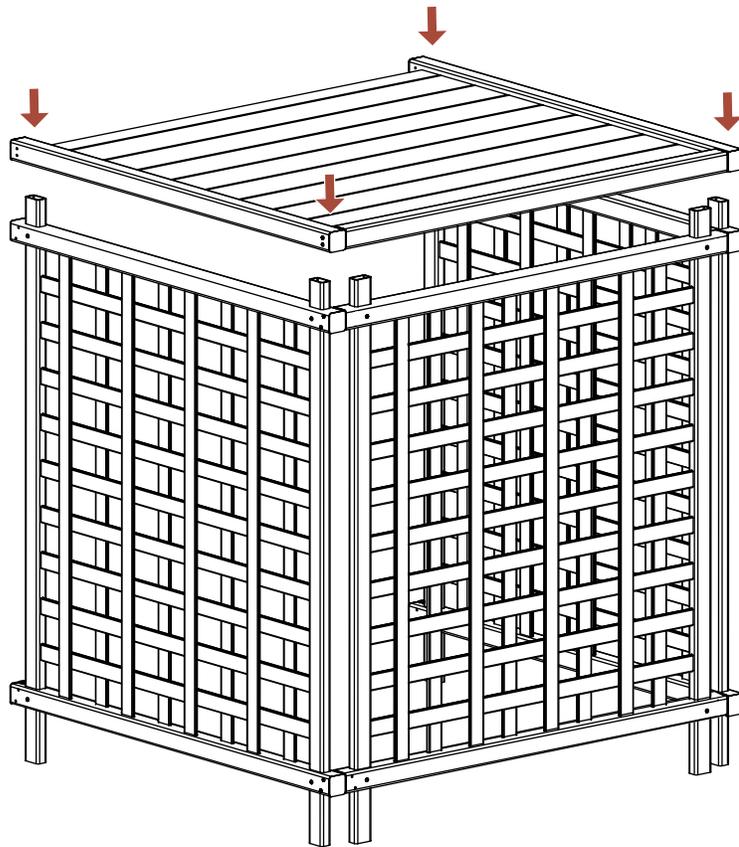

ENCLO

HIDE IT WITH STYLE

www.encloscreens.com

support@encloscreens.com



704-892-5222
877-234-6196



6935 Reames Rd. Ste. K.
Charlotte, NC 28216



ASSEMBLY
INSTRUCTIONS
ZP19054

VER. 062421